

Checking your tire pressure and tire condition on your RV is very important before a trip. Under inflation is the main cause of tread separation which can cause extensive damage to the undercarriage of your unit.

Always check you tire pressure when the tires are cold, not hot. hot air expands and will give you a high pressure reading not a true psi.

Don't forget your spare!!